

AGR JUMPER SETTINGS

REV 1.31

NOTES:

- 1) "X" → Jumper is inserted.
- 2) Selected MODE remains active while jumper(s) in place.
- 3) The TEST Modes require a Satellite Sync from the GPS.

TO SET THE DIAL:

- * INSERT THE DIAL JUMPERS.
- * INSERT *SET DEFAULTS* JUMPER.
- * POWER-UP AND WAIT 15 SECONDS.
- * POWER-DOWN.
- * REMOVE *SET DEFAULTS* JUMPER.

<u>MODE</u>	<u>M1</u>	<u>M0</u>
NORMAL		
FINE CAL		X
TST:RANDOM	X	
TST:CAL PNTS	X	X

<u>DIAL</u>	<u>D1</u>	<u>D0</u>
50 MPH		
80 MPH		X
55 MPH	X	
UNIVERSAL	X	X

FINE CALIBRATION

- * Rotates all Cal Points CW the same amount.
- * Start with the needle at rest (full CCW) below 5.
- * Insert M0 Jumper.
- * Power-UP.
- * The needle will begin to slowly 'creep-up' CW.
- * When the needle is centered on the 5 MPH hash-mark, immediately Power-down.
- * Insert both M1 and M0 jumpers. Power-up, and check all Cal Points.
- * Set Defaults to do over.

