

## NL4 TEST MODE



Again keep the ENGINE OFF.

With the power off, the NL4 case open, note where the NL4 Jumper is, and move it to the TEST Position; see the (yellow) jumper in the pic.

Make sure the GPS is plugged in.

Turn the power on and observe:

- Wait for the GPS to Sync; the GREEN LED will stop flashing and remain ON solid.
- Only while the GPS is sync'd will the NL4 simulate Test speeds. Watch on the speedometer. The simulation is a cycle; entry point into the cycle is arbitrary.
  - The speed will increase to above 30 MPH, then relax to, and momentarily hold at approximately 15 MPH.
  - The speed will then increase to above 40 MPH, then relax back and hold for several seconds at approximately 30 MPH.
  - The speed will fall to zero and hold for several seconds.
  - The cycle repeats (indefinitely).

Observe for several cycles.

