

NL4-MW INSTALLATION and OPERATION GUIDE

{Shown with Optional PerfectPass DBW Patch Cable}

Mate-N-Lock 6 Position Plug CONNECTOR.

Attach to the PerfectPass DBW Engine Harness.
(Wire colors will all have a Black Stripe.)

PS2 MINI CIRCULAR CONNECTOR.

GPS RECEIVER CONNECTS HERE

Deutsch 8 Position Socket CONNECTOR.

Attach directly to the Speedometer.

Deutsch 8 Position Plug CONNECTOR.

Attach to the Speedometer's connector.

Mate-N-Lock 6 Position Socket CONNECTOR.

Attach to the Boat harness feeding the
PerfectPass DBW Engine cable/connector.

NL4-MW INSTALLATION and OPERATION GUIDE

The installation of the NL4 is simple. This product is a retro-fit. The NL4's 'power and signal' connectors are identical to your existing paddle-wheel and power connectors. Your tasks are basic: locate the GPS pod, mount the NL4, unplug the paddle-wheel/power, and attach the NL4. Wire stripping and/or splicing are NOT required.

TURN OFF THE POWER and DISCONNECT THE BATTERY.

Locate the GPS Receiver.

The NL4's compatible GPS Receiver is waterproof with great reception. It's resilient and tolerant to marine surroundings. These following constraints are key: the GPS requires a clear line-of-sight to the sky; the windshield and/or cloth top shouldn't present a problem. Keep it away from other electronics / antenna's that may interfere with the receiver. Every boat is different, so experiment with varied Receiver locations to find the best (before mounting it permanently).




NL4 Mounting Considerations.

The NL4 provides two mounting flanges on its case. Use these to secure the case on a flat surface, that's in reach of both the GPS Receiver and paddle-wheel connector. The mounting holes accept #8 screws (not provided).

Attach the NL4 Speedometer Signal.

Separate the connector from the Speedometer's backside; Note connector orientation in the picture below. Insert the NL4's eight-position (grey) socket connector into the Speedometer.

Reattach the loose Speedometer connector to the (grey) eight-position plug.

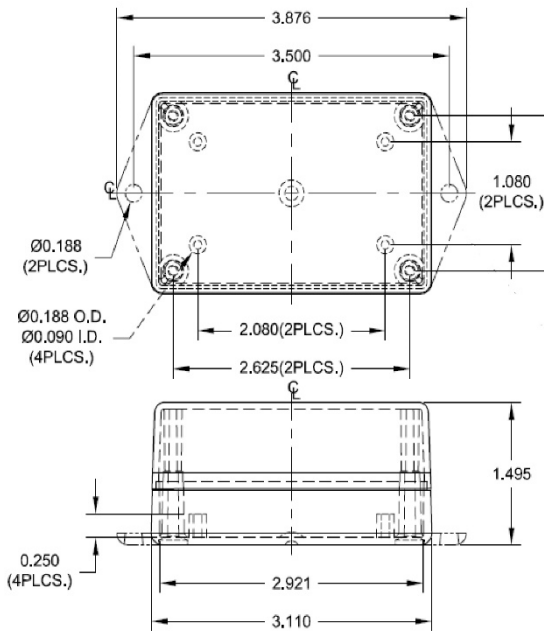

Option: PerfectPass Patch cable for DBW Module.

Follow the cable harness out of the DBW Modules *ENGINE* connector. Find the (white) six-position Mate-N-Lock connector associated with the wire colors all having a Black stripe. Separate the mating connector halves. Marry the NL4's Mate-N-Lock pair to the boat's 'loose' Mate-N-Lock pair. Gender's are polarized, so they can reconnect in only one way.

NL4-MW INSTALLATION and OPERATION GUIDE


Option: Digital Cruise Patch cable.

Thread the NL4's Grey cable/connectors to the paddle-wheel connector. Separate the mating halves of the computer-to-paddle-wheel connector. Insert the NL4's six-position Plug (male pin) connector into the Dash's six-position socket; Make sure the mating connector latches engage.

To preserve the lake temperature function from the paddle-wheel, insert the free paddle-wheel Plug into the NL4's six-position socket connector. Make sure the mating connector latches engage.

Attach GPS Receiver.

Plug the GPS Receiver into the NL4's PS2 connector. Note the 'ARROW' embossed into the connector. Orient the arrow at 12 o'clock, or away from the mounting flange. Fully insert the metal shell/pins into the socket. Be sure to strain relief the GPS Receiver cable/connector, with a cable tie to a nearby fixed provision.

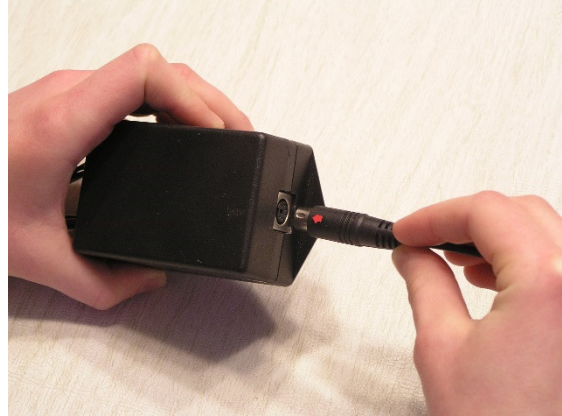

Reconnect the Battery.

Operation.

The NL4's sole function is to communicate speed data from the GPS Receiver to the Instrumentation (Dash) Computer Module. The NL4 will in NO-WAY interfere or meddle with normal computer functions. The format of the NL4's speed output is an exact match to the paddle-wheels, and is a seamless integration into the computer system.

On a 'cold start' (power turned on after a prolonged off period) the GPS Receiver will require 1 - 2 minutes to sync to the satellites. With a warm start, expect the satellite sync within seconds.

The GPS Receiver is equipped with an internal Status Light.

1. THE LIGHT FLASHES: When the Receiver has power.
2. THE LIGHT REMAINS SOLID: When the Receiver has a Satellite Sync. This is required for normal operation.

Calibration.

Follow the Speedometer Calibration procedure outlined in the Boat Manufacturer's Instruction Manual. A hand-held GPS is a very useful speed reference. Typically, the Paddle-wheel's speed is 1 to 2 mph slower than the cleaner, faster NL4.

Warranty. Nautic Laugic warranties the NL4 for one year.

Should this product malfunction or fail, please return it so we can make it right!! Please see our policies page at www.nauticlaugic.com

THANK YOU FOR BUYING OUR PRODUCT!!

